

CopyCam 6.0.5 Release Notes

Rev.D
February 19, 2010

Overview

This document contains release notes for PolyVision's CopyCam Firmware Update. This firmware version is for USB CopyCam units only.

What's New in CopyCam 6.0.5?

New Features

Version 6.0.5 adds these new features over versions r6.0.1 and r5.52

| Feature | Description |
|----------------------------|--|
| New Setup Page Layout | Navigation to the Setup Page will now require user/password authorization PRIOR to viewing the information. |
| Save to WEB notify URL | Enter the address of the server that the CopyCam will notify when a new image has been captured. When an image has been captured, the CopyCam will send the HTTP command to this server to notify it that a new image is present to be downloaded. |
| Days to keep stored images | Choose the number of days the CopyCam will keep an image before deleting it. |
| Disable USB drive access | Check this box to disable access to the USB drive on the control pad. |
| DCHP | Sometimes while changing the unit from static to use DHCP needs to refresh in order to acquire DHCP. This has been fixed in 6.0.5 |

Upgrade via USB procedure

1. In your browser's address bar type:
<http://steelcase.polyvision.com/support/Downloads-CopyCam.asp>
2. Download the firmware version "**CopyCamUSB_6.0.5.fw**".
3. Copy this firmware to a "**USB key**".
4. After being copied to the USB key rename the file to: "**CCam_1_1.fw**".
5. Unplug the CopyCam power.
6. Insert the "**USB drive**" in the control pad.
7. Plug in the CopyCam power to the power outlet.
8. When the amber light starts blinking rapidly, immediately press the button "**Save to USB**" in the control pad and hold it down until you hear the message "**Working**".
9. For the following 10 minutes you will hear the messages "**Working,**" "**Please Wait,**" "**Working**" in order.
10. Approximately 1 1/2 minutes later you will hear the message "**Hello**".
11. Open your browser and check that CopyCam has now been successfully upgraded.

Documentation

Documentation for all CopyCam firmware 6.0.5 features are available on the release CD in the manuals directory. The documentation can also be found online at:

<http://www.steelcase.com/copycam>

Known Issues

Older firmware prior to 6.0.1 does not properly handle the newer FTP servers. This has been fixed in 6.0.5. However, if you are running a CopyCam with older firmware you may not be able to connect to the Steelcase FTP server. To run a FTP firmware update. In this condition do the following:

Installation

Follow these five easy steps to upgrade your CopyCam to version 6.0.1 and older. All of your captured images will remain in your CopyCam Internally.

1. Go to your CopyCam Web page by entering the CopyCam IP address in your Web browser.
2. When the Web page appears, click on the 'camera info' tab and check the 'firmware revision' line to determine your current firmware version.
3. Click on the 'settings' tab and enter the following in the 'firmware upgrade server' box:
 - If your version is lower than v6.0.1, you'll have to upgrade twice. In the Firmware Update Server field enter "172.16.34.26:/firmware/CopyCam-6.0.5.fw" (without quotes).
 - If your version is v2.32 through v4.08, enter "172.16.34.26:/firmware/CopyCam-5.12.fw" (without quotes).
 - If your version is "v6.0.5", your upgrade has already been completed – stop here.
4. Click the '**Start Update**' button. If prompted for a username and password, leave the username blank and use '**admin**' for the password (your password may have been changed by your system administrator, please check with your administrator for the new password).
5. Do not turn off your CopyCam. The process may last 2-10 minutes depending on your network connection speed. Once your CopyCam light turns green again, it is ready to use.

Support

If you have questions or difficulties with the installation, please call Steelcase Technical Support at: 1.800.334.4922.

Email: techsupport@steelcase.com Internet: <http://www.steelcase.com/copycam>.

In other areas outside the USA, contact Steelcase Europe/Asia Technical Support:
Phone: +32 (0)89 32 31 30 Fax: +32 (0)89 32 31 31.

Email: business.center@steelcase.com Internet: <http://www.steelcase.com/copycam>.